THE BOLD LOOK OF KOHLER®

SERVICE KIT INSTRUCTIONS

Rotating Trim Ring Replacement K-9498

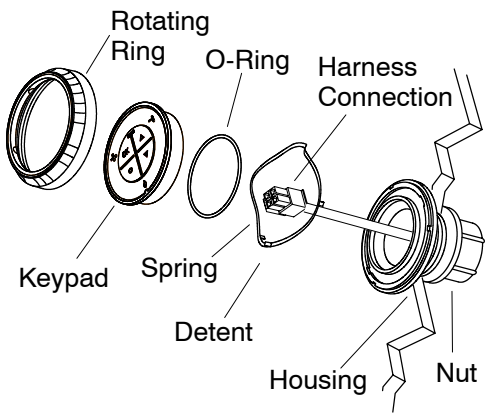

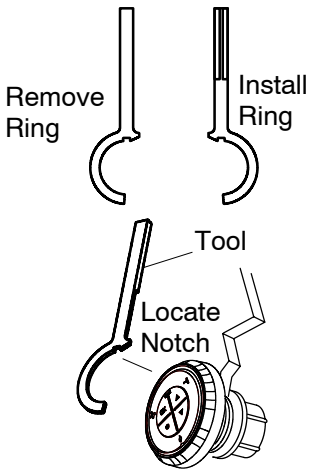

Remove Old Rotating Ring

- ❑ Turn power to the whirlpool off.
- ❑ Inspect new ring for damage before you begin installation.
- ❑ Slip the tool between the whirlpool and the rotating ring in the removal position. Align the notch in the tool with the tab on the keypad. With the notch engaged with the tab, rotate the tool approximately 30° counterclockwise.
- ❑ Carefully pull the rotating ring and keypad out of the housing.

  IMPORTANT! Make sure the harness cable does not fall back through the housing.
- ❑ Pull a minimum of 12″ (30.5cm) of cable through the housing. Disconnect the harness connection from the keypad.
- ❑ Use your thumbs to press the keypad out of the rotating ring.

Install New Rotating Ring

- ❑ Place the keypad on a flat surface with the decal side down. Align the tabs with the new rotating ring. Gently compress the tabs until the ring slides over the keypad. Snap the ring into place on the keypad. The ring should rotate freely around the keypad.
- ❑ Make sure the detent spring is in place in the housing. The spring has tabs that must be located properly in the housing. The plastic detent button is located at the bottom.
- ❑ Make sure the O-ring is in the correct location on the back of the keypad.
- ❑ Align the keypad to the housing with the keypad tab at the top. Slip the tool between the whirlpool and keypad ring in the install position. Gently press on the face of the keypad while using the tool to rotate the keypad approximately 30° clockwise until it locks in position in the housing.

Verify Function

- ❑ Restore power to the whirlpool.
- ❑ The keypad will automatically download information to the whirlpool control. This process takes approximately five seconds. A light sequence will illuminate up and down the indicator bar until the process is complete.
- ❑ Press the power button and verify that all modes work properly. Refer to the Homeowners Guide shipped with your whirlpool.
- ❑ If a remote control is used, refer to the Homeowners Guide for programming instructions.

USA: 1-800-4-KOHLER
Canada: 1-800-964-5590
Mexico: 001-877-680-1310
kohler.com
© 2003 Kohler Co.

1021754-9-**A**